

# SCREWS

Self-tapping screws are available for securing PCBs and mounting plates as well as components.

Installation instructions: Please note the different types of cross-head screws (PZ / PH) as well as the size of the screwdriver.



## Select Versions



**A0304031**  
Self-tapping screws 0.087" x  
0.197" (PZ1)



**A0305031**  
Self-tapping screws 0.098" x  
0.236" (PZ1)



**A0306031**  
Self-tapping screws 0.118" x  
0.236" (PZ1)



**A0308031**  
Self-tapping screws 0.118" x  
0.315" (PZ1)

# SCREWS



**A0308132**  
Self-tapping screw 0.118" x  
0.315" (T10)  
Stainless steel



**A0325060**  
Self-tapping screw 0.098" x  
0.236" (T8)  
Stainless steel



**A0325080**  
Self-tapping screws 0.098" x  
0.315" (PZ1)



**A0330080**  
Screw M3 x 3.150" (T10)  
Stainless steel



**A9199008**  
Set of screws



**B5111201**  
Set of screws

Subject to technical modification without notice. © by OKW Gehäusesysteme, Buchen/Germany.